

- DEHUMIDIFIER**
- * REPLACE DESICCANT
 - * REPLACE FILTERS
 - * REPLACE BEARINGS
 - * REPLACE/ADJUST BELTS


- SILOS**
- * REPAIR RUST DAMAGE
 - * SAND BLAST/PAINT
 - * WELDING REPAIR
 - * REPAIR LEAKS
 - * SERVICE/INSTALL PVR VALVES

- BIN VENT SERVICE**
- * TIMER BOARDS
 - * DIAPHRAGMS
 - * SOLENOIDS
 - * DOOR GASKETS
 - * BAG/CAGES
 - * CARTRIDGES

- LEVEL INDICATOR**
- * REPAIR/REPLACE

- PIPE RUNS**
- * REPAIR/REPLACE COUPLERS
 - * MODIFY/ADD PIPE RUNS
 - * INSTALL NEW PIPE RUNS

- SCALE VALVES**
- * REPAIR/REPLACE SOLENOID
 - * REPAIR/REPLACE LIMIT SWITCHES
 - * REPLACE FLEX CONNECTIONS
 - * REPAIR LEAKS

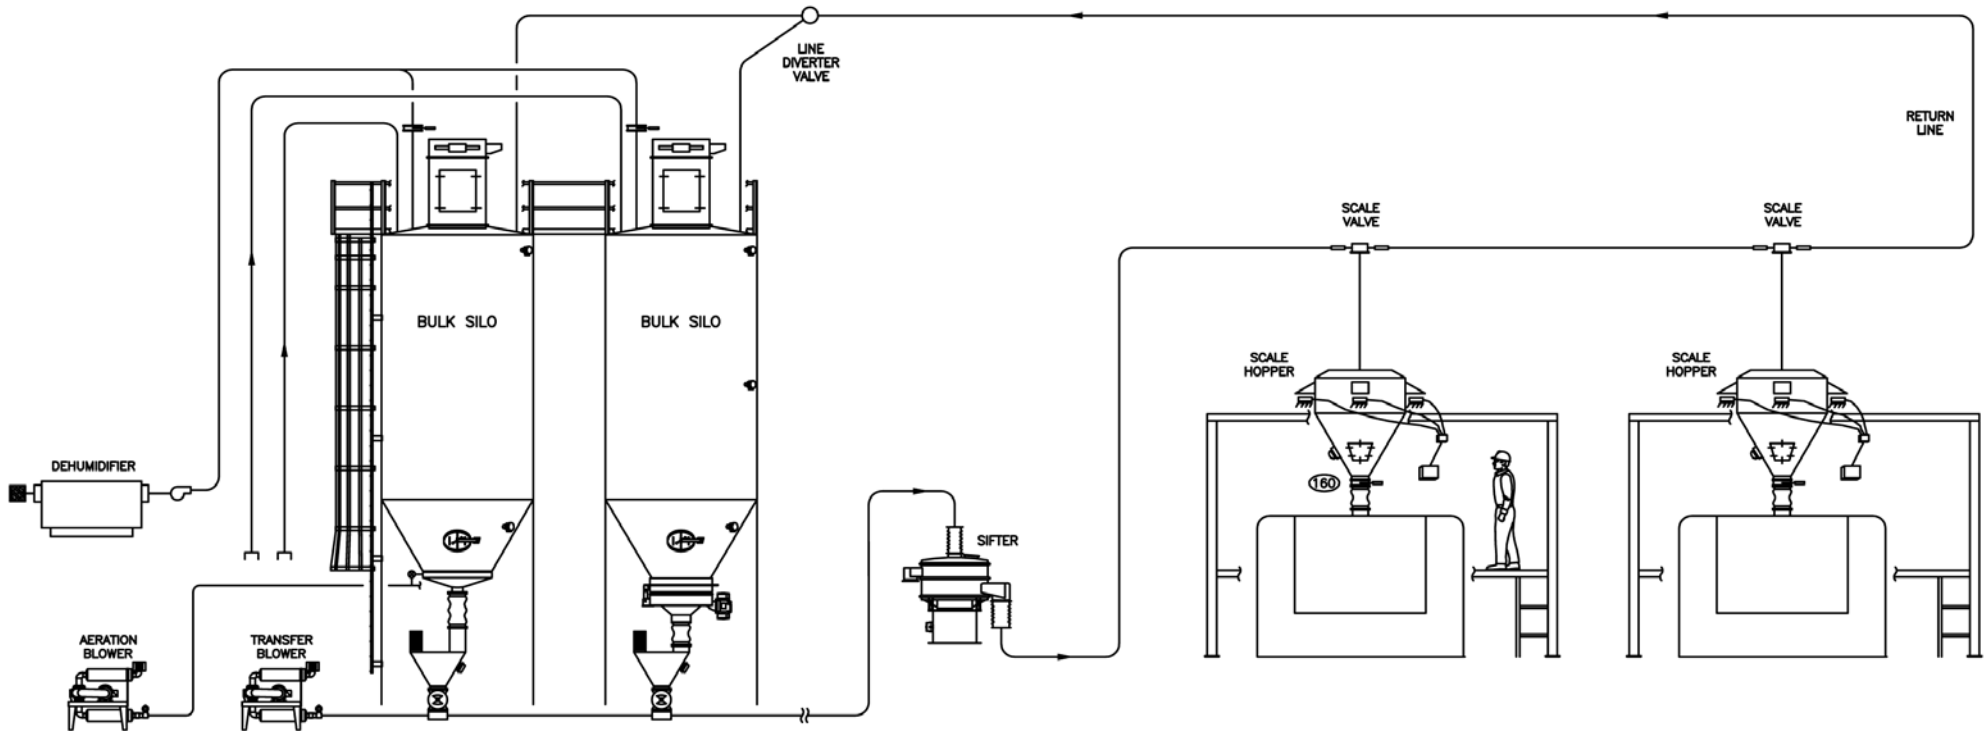

- BLOWER SERVICE**
- * CHANGE OIL
 - * REPLACE/ADJUST BELTS
 - * CLEAN/REPLACE FILTERS
 - * EMERGENCY REBUILD
 - * CHECK TEMPERATURE

- AIRLOCK SERVICE**
- * REBUILD/REPLACE
 - * REPAIR LEAKS
 - * MEASURE TOLERANCES
 - * REPLACE BEARINGS/SEALS

- BIN DISCHARGER/AIR DISC**
- * REPAIR LEAKS
 - * REPLACE AIRSLIDE FABRIC
 - * REPLACE FLEX CONNECTIONS

- SIFTER**
- * LUBRICATE BEARINGS
 - * REPAIR LEAKS
 - * REPAIR/REPLACE SCREENS

- SCALE HOPPERS**
- * REPAIR LEAKS
 - * REPAIR METAL FATIGUE
 - * VERIFY ACCURACY/FUNCTIONS
 - * REPAIR/REPLACE LOAD CELLS
 - * SAND BLAST/PAINT

- SUPPORT STRUCTURE**
- * REPAIR/MODIFY